



***Guardian Wireless Door Control Push Button
Model WWB
Battery Change Instructions***

- The Guardian Wireless Door Control Push Button uses a 12V A23 or AE23 battery.
- Remove the WWB from the wall by unscrewing the two mounting screws.



- The battery can be found behind the removable door on the rear of the control.
- Remove the door.
- Remove the battery and replace with a new AE23 battery.
- Re-fasten the battery door and re-screw the control to the wall.
- The control's code is stored in the operator and will not be lost when the battery is changed.